






# INSTALLATION GUIDE

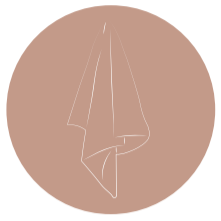

Ensure both the bench top and the underside of the basin are clean and free of debris.

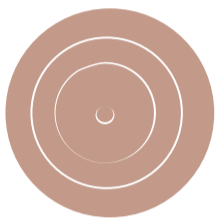

Apply a circle of clear flexible bathroom silicon to the underside of the basin, centered between the perimeter of the basin and the waste hole.

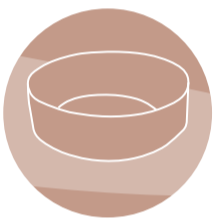

Press the basin down onto the bench top, aligning the waste hole.



Ensure that the waste is installed with rubbers on both the top and bottom, and be sure to not over tighten.

Installation of waste must include rubber seals on the top and bottom of the basin. If these are not included it will void the warranty of the basin. Do not over tighten the waste as this can cause the basin to crack and will not be covered under warranty.

All Concrete Nation basins must be installed with a flexible type sealant. The use of non-flexible sealant, Liquid Nails or Epoxy's of any kind will void all warranty and can damage the product.

*For Pod Basin Installation Guides, please head to our website, click Shop, then find the Pod Basin Purchased and scroll for the link to Install Guide.*